

Indication of faults

Description The room unit indicates faults that may have occurred in the unit itself or in the system. Faults cannot be reset. They will be cleared only when rectified.

Info line 2 or line 50 Press the Info button to select Info line 2, or the line selection buttons to select line **50**.

Effect If a fault is indicated, the fault / status code symbol flashes. The fault can be displayed in clear text by pressing the Info button. The fault automatically displayed is always the fault with the highest priority (most severe fault). If other faults are present at the same time, the next fault with the highest priority will be displayed after the present fault has been corrected.

Own displays In the case of a room unit-specific fault or a fault of Siemens boiler control, the error code and appropriate error text will be displayed.



Example of own fault display

Other displays In the event of a fault occurring on a boiler control system of other manufacture, the error code delivered is preceded by #.



Example of other fault display

Error code list	Error code	Display QAA73.110	Description of error
	0	No error	No error
	10	OutsideSens	Fault outside sensor
	60	Room sensor	Fault room sensor
	100	TimeMaster	No valid external time (yearly clock)
	118	W-Press low	Water pressure too low
	124	Boiler temp	Alarm boiler temperature (too high)
	131	Burn lockout	Fault burner
	142	OpenTherm	Missing partner unit on LPB
	150	BMU	General BMU fault
	153	Interlock	Boiler control interlocked
	162	AirPressSwi	Fault air pressure switch