

3.16 Language

Description

There is a choice of languages for the display.

Line 47

1. Press the line selection buttons to select line 47.
2. Press the + / – buttons to select the required language.

Setting range

Factory setting

German, English ...

German

The assignment of other languages depends on the relevant software release. They can be selected by pressing the + / – buttons again.

3.17 Indication of faults

Description

The room unit indicates faults that may have occurred in the unit itself or in the system. Faults cannot be reset. They will be cleared only when rectified.

Info line 2 or line 50

Press the Info button to select Info line 2, or the line selection buttons to select line 50.

Effect

If a fault is indicated, the fault / status code symbol flashes. The fault can be displayed in clear text by pressing the Info button. The fault automatically displayed is always the fault with the highest priority (most severe fault). If other faults are present at the same time, the next fault with the highest priority will be displayed after the present fault has been corrected.

Own displays


In the case of a room unit-specific fault or a fault of Siemens boiler control, the error code and appropriate error text will be displayed.



Example of own fault display

Other displays

In the event of a fault occurring on a boiler control system of other manufacture, the error code delivered is preceded by #.

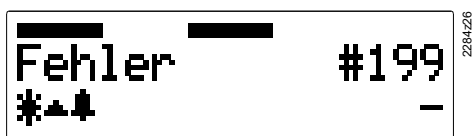

Example of other fault display

Error code list

<i>Error code</i>	<i>Display QAA73.110</i>	<i>Description of error</i>
0	No error	No error
10	OutsideSens	Fault outside sensor
60	Room sensor	Fault room sensor
100	TimeMaster	No valid external time (yearly clock)
118	W-Press low	Water pressure too low
124	Boiler temp	Alarm boiler temperature (too high)
131	Burn lockout	Fault burner
142	OpenTherm	Missing partner unit on LPB
150	BMU	General BMU fault
153	Interlock	Boiler control interlocked
162	AirPressSwi	Fault air pressure switch

Other fault displays