

Fault warnings appear on the secondary display (figure 1 b) alternating with the time, both of them flashing (figure 4.1). It is not possible to reset malfunction warnings which appear on the secondary display as the cause of the alarm has first to be removed.

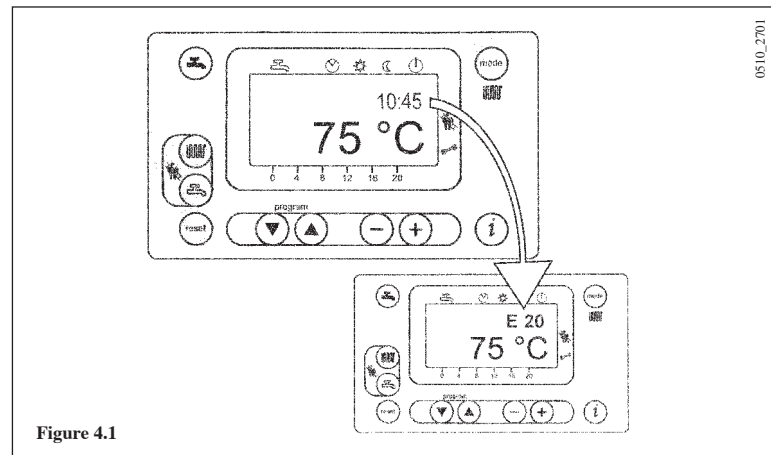


Figure 4.1

3-9. Fault warnings table

Fault code	Fault description	action required
E10	outdoor temperature probe sensor failure	call the authorised service centre.
E20	ntc output sensor failure	call the authorised service centre.
E50	domestic hot water ntc sensor failure	call the authorised service centre.
E110	safety or flue gas thermostat tripped	press the reset key (for about 2 seconds; if this device is triggered repeatedly, call the authorised service centre)
E128	loss of flame during operation (the ionization current has fallen below the limit)	call the authorised service centre.
E129	minimum fan speed limit is hurt	call the authorised service centre.
E132	floor thermostat tripped	call the authorised service centre.
E133	no gas	press the reset key (for about 2 seconds); if the fault persists, call the authorised service centre)
E151	boiler circuit board error	switch off the electricity supply to the boiler for 10 seconds; if the fault persists, call the authorised service centre)
E153	the reset key has been pressed inappropriately	press the key again (about 2 seconds)
E154	internal error on boiler circuit module	Press and hold reset button (2 seconds approx.) then press again when warning E153 appears
E160	fan speed threshold not reached	call the authorised service centre.
E164	no hydraulic differential pressure switch enabling signal	check that the system is at the rated pressure. (refer to the section on filling the system). if the fault persists, call the authorised service centre.

All the faults are displayed in order of importance; if several faults occur simultaneously, the first to be displayed is the one with highest priority. After the cause of the first fault has been removed, the second one will be displayed, and so on.

If any given fault occurs frequently, contact the authorised Service Centre.